


30" Sink Unit Installation



Special Tools

Level
1/4" deep well socket
Caulking Gun
Belt Sander

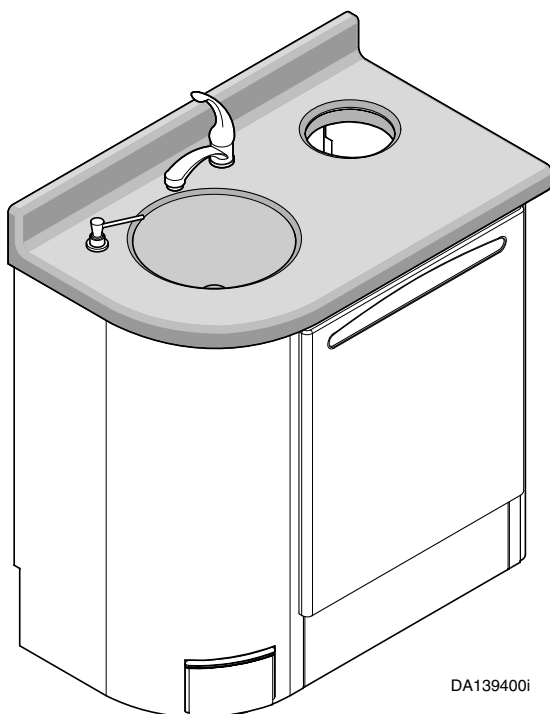


DA139400i

DM-OSC030L-001 (Shown)

Models:

- DM-OSC030R-001 (30" Sink Unit w/Tapmaster™, RH)
- DM-OSC030R-002 (30" Sink Unit w/o Tapmaster™, RH)
- DM-OSC030L-001 (30" Sink Unit w/Tapmaster™, LH)
- DM-OSC030L-002 (30" Sink Unit w/o Tapmaster™, LH)

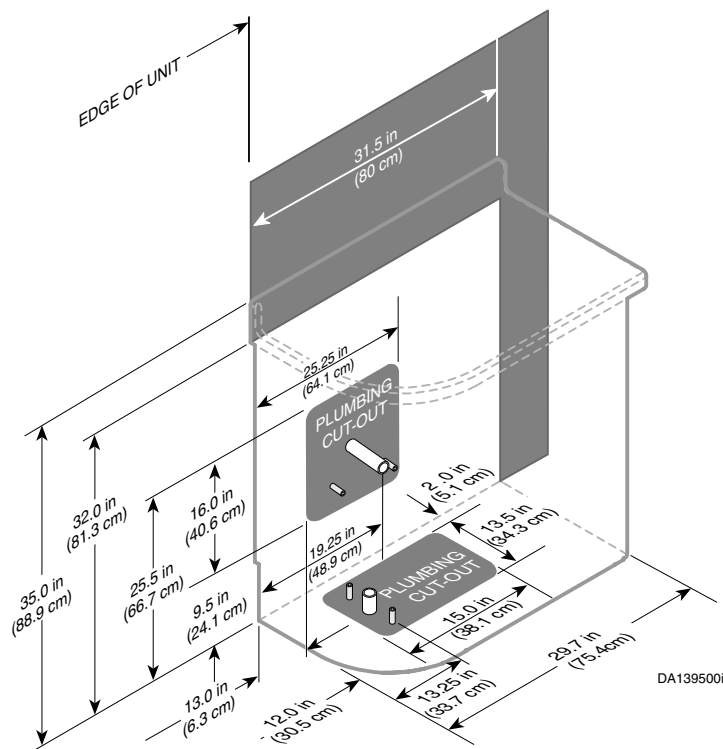


DA139500i

NOTES:

• All plumbing must be made by a licensed plumbing contractor and conform to local, city, and national codes pertaining to the installation.


• The wall layout shows a LH unit.

If unit being installed is a RH unit, layout and dimensions are a mirror image.

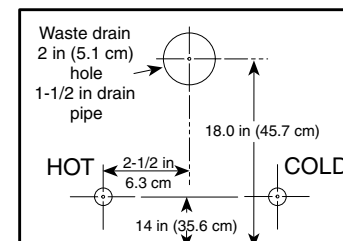

FLOOR
3/4 in (1.9 cm) Hole
1/2 in NPT Water Pipe
Stub out 1-3/4 in (4.5 cm) Min.
3-3/4 in (9.5 cm) Max from finished wall surface
Use 1/2 in male NPT fittings on end of stubs for connections to shut-off valves.
Install 1/2 in inlet x 3/8 in O.D. outlet angle shut-off valves.


WALL MOUNT SERVICE

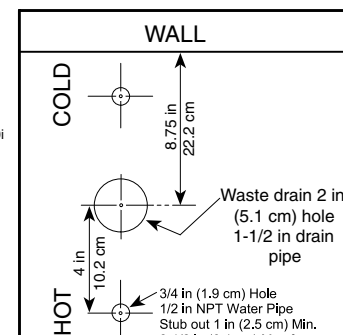

Waste drain 2 in (5.1 cm) hole
1-1/2 in drain pipe
3/4 in (1.9 cm) Hole
1/2 in NPT Water Pipe
Stub out 1 in (2.5 cm) Min.
2-1/2 in (6.4 cm) Max from finished floor surface
Use 1/2 in male NPT fitting on end of stubs for connections to shut-off valves. Install 1/2 in Inlet x 3/8 in O.D. outlet angle shut-off valves.


FLOOR MOUNT SERVICE

SINK BASE CABINET INSTALLATION

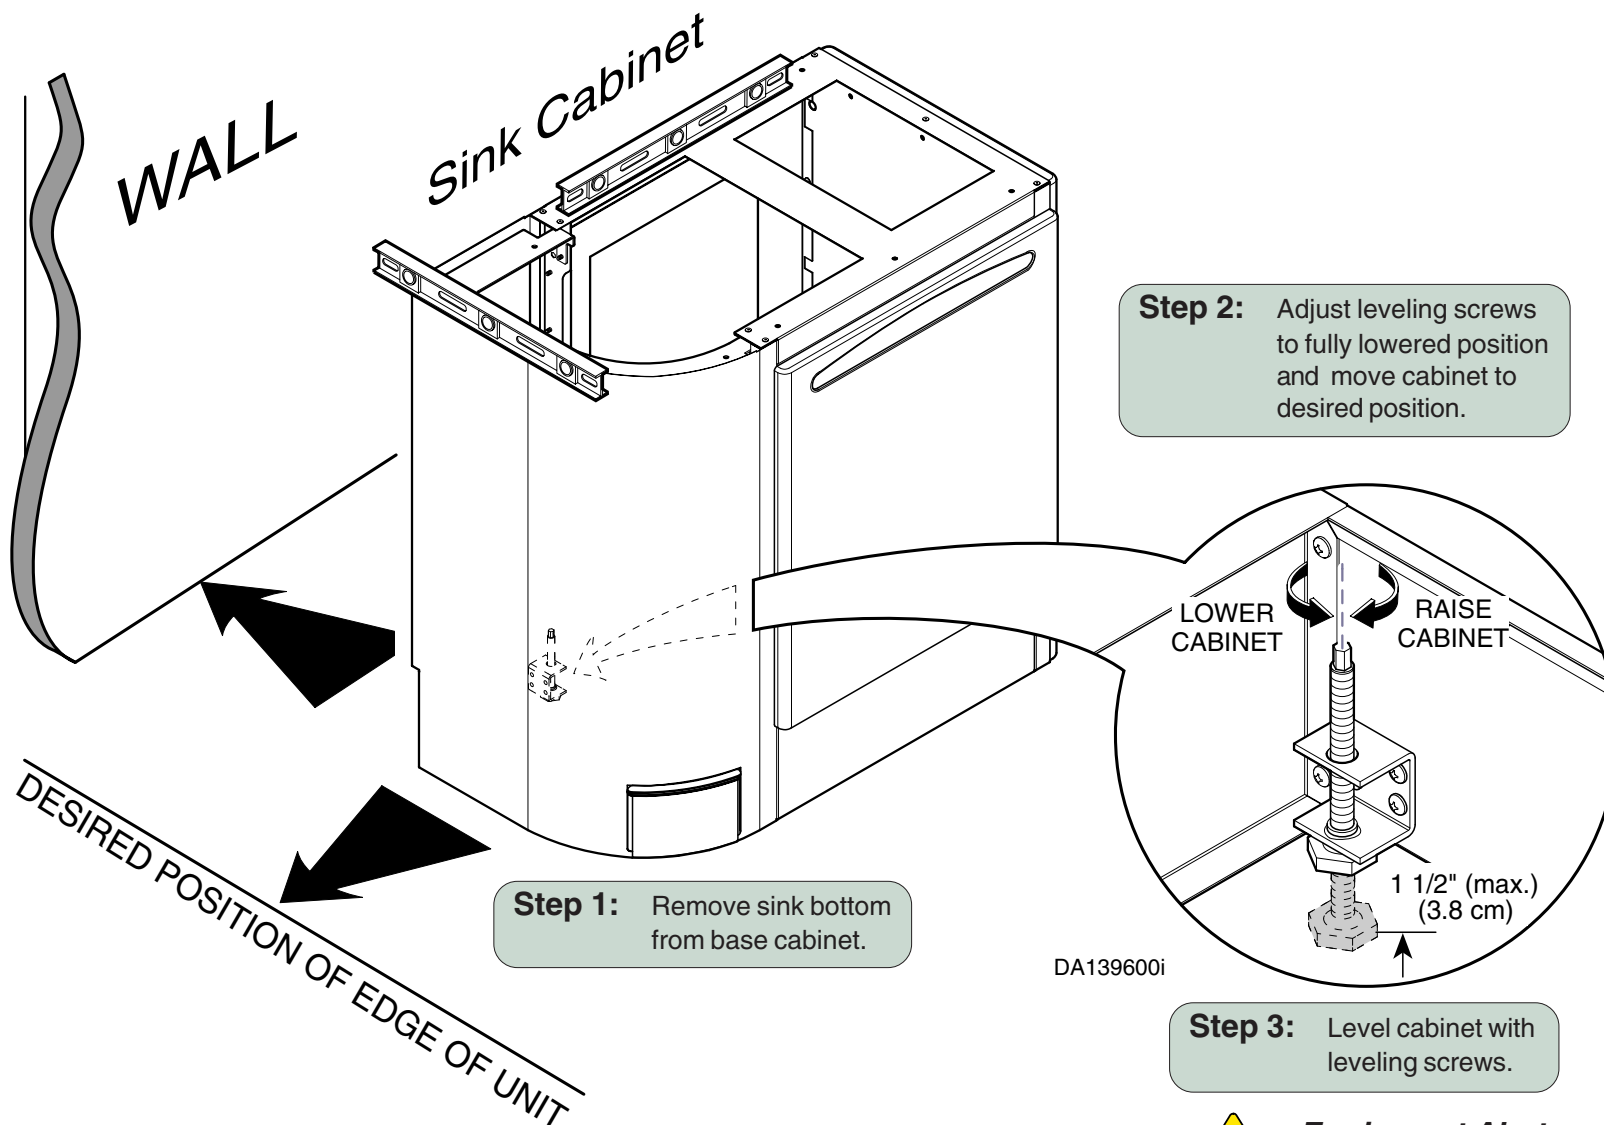

Equipment Alert
Do not adjust leveling screws more than 1 1/2" (3.8 cm) to prevent loss of stability.

DOOR ADJUSTMENT

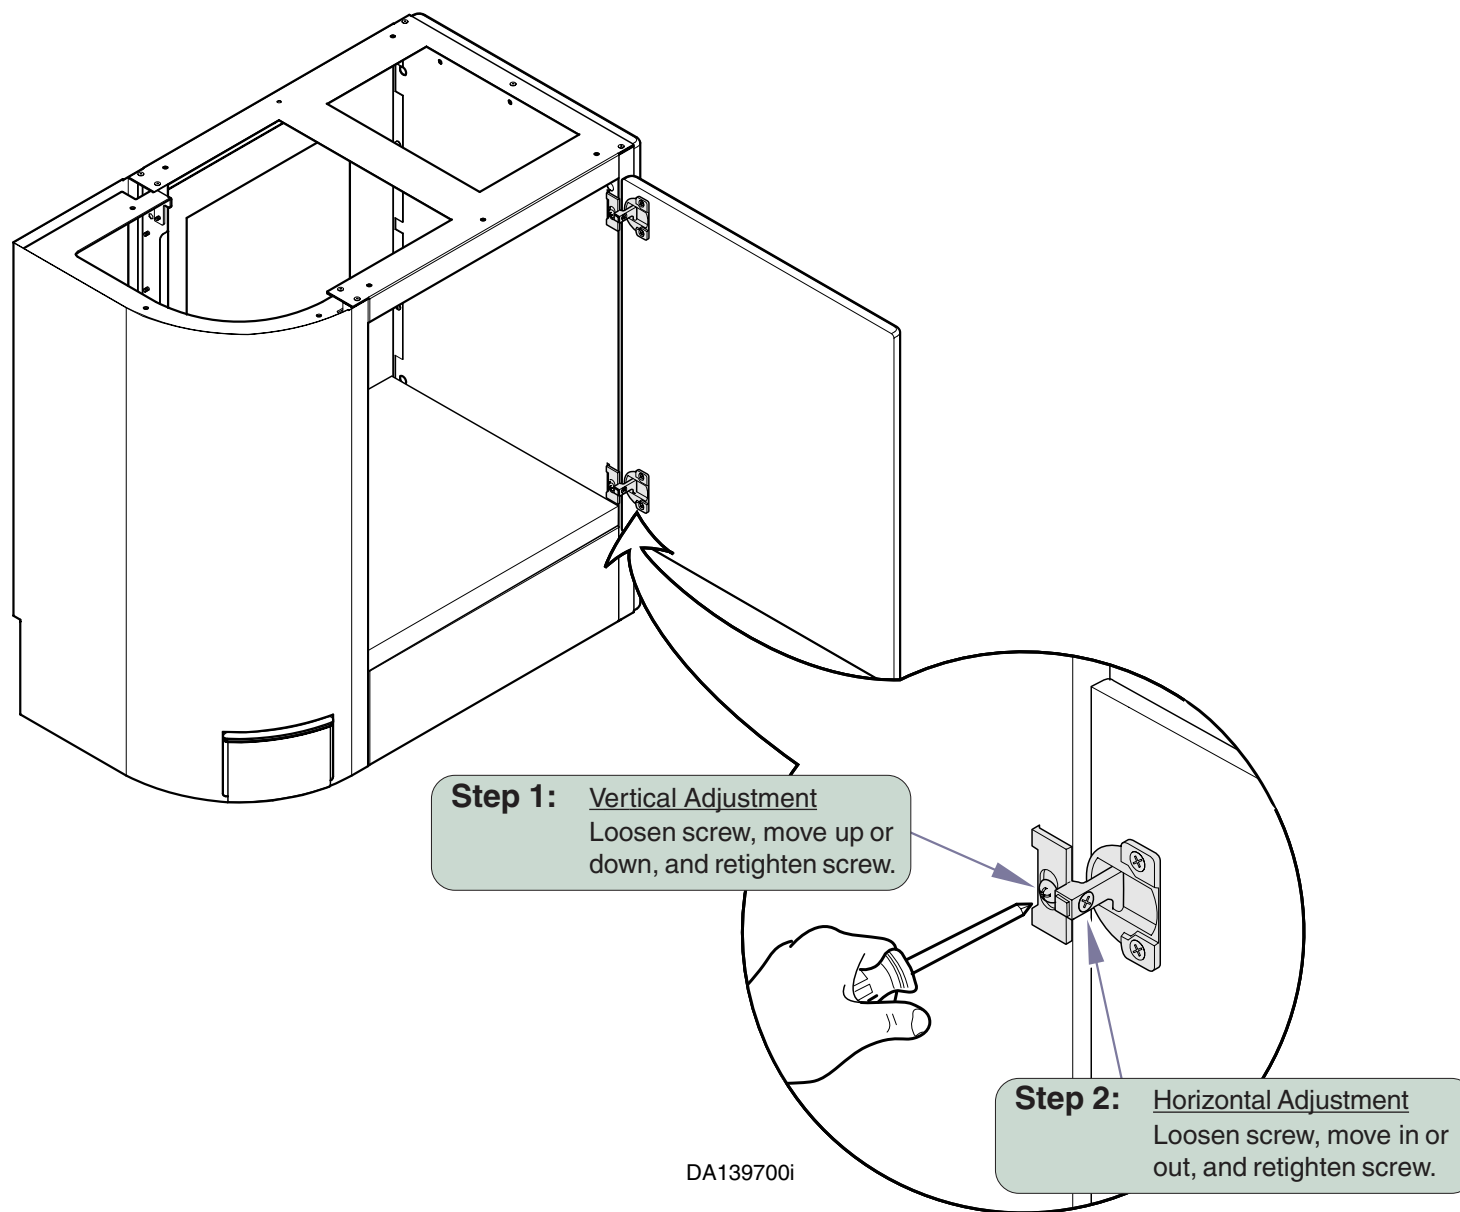

COUNTERTOP INSTALLATION

NOTE:

*If necessary, sand
countertop to form
to wall.*

Step 2: Position countertop so it extends 3/8" (0.95 cm) to 1/2" (1.3 cm) over each end of cabinet(s) and secure with #10 x 5/8" screws.

Step 1: If necessary, level and connect any additional storage units to Sink Unit.


**Special hex bolts
(#10-24 x 3/4")**

DA139801i

SINK INSTALLATION & PLUMBING CONNECTIONS

NOTE:

All plumbing must be made by a licensed plumbing contractor and conform to local, city, and national codes pertaining to the installation.

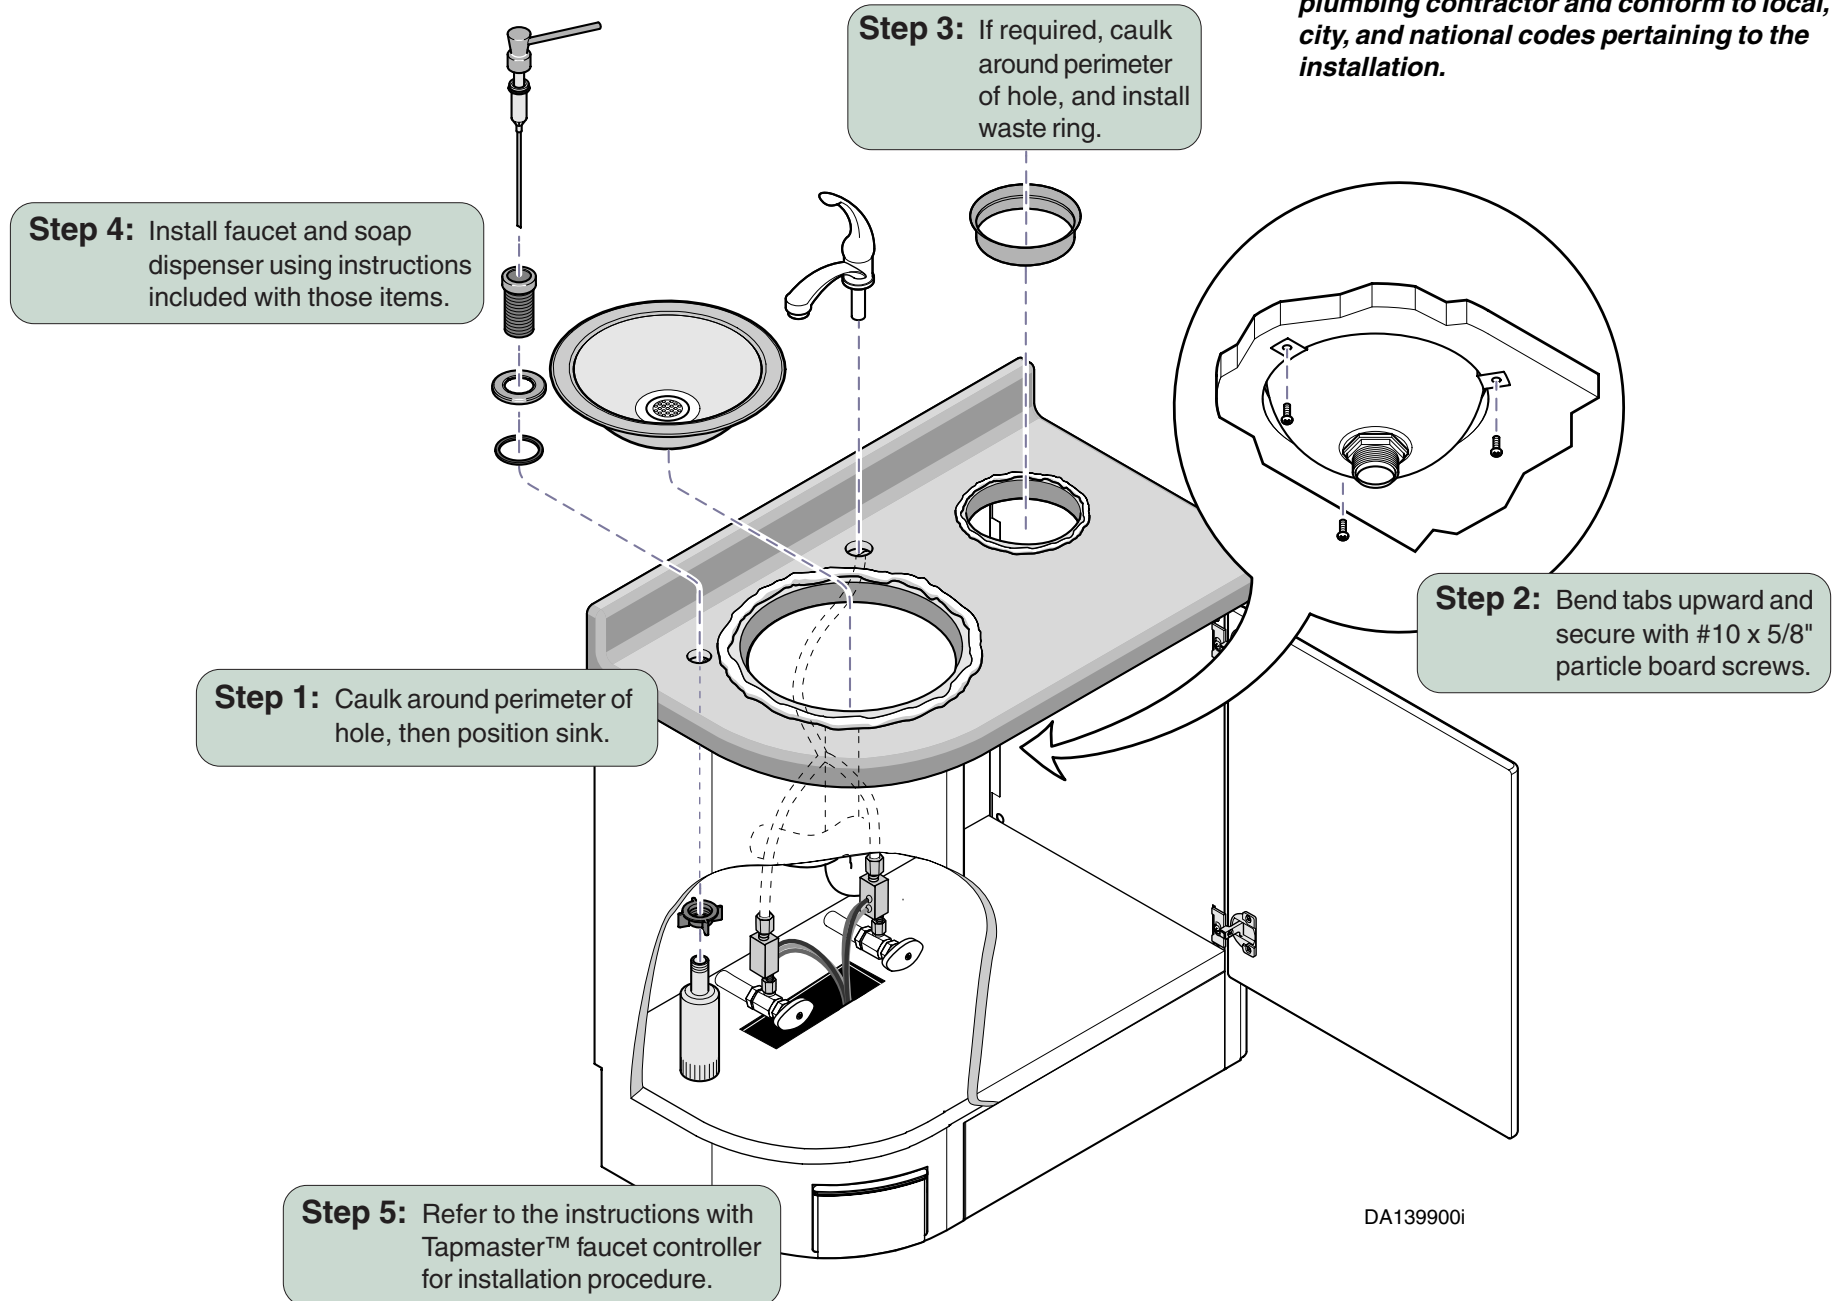

DA139900i

Midmark Corporation
60 Vista Drive
P.O. Box 286
Versailles, OH 45380-0286
937-526-3662
Fax 937-526-5542
www.midmark.com

